


Electronic Roll Towel Dispenser

Adjustable Settings Instructions


Battery Loading

The Raphael electronic dispenser is designed to work with 4 x D cell Alkaline batteries. Take care to load batteries in correct orientation, with positive end of battery towards the right as you are facing the dispenser.

WARNING: Do not use rechargeable or NiCad batteries as these may cause damage to your dispenser or personal injury.



Adjustable Settings - Control Pad

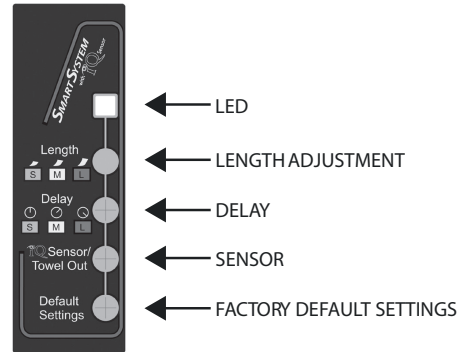

LED

This light is the status indicator. When cover is open (service mode) light will flash indicating battery status.

Light Pattern	Battery Status
Green – Yellow – Green	Good
Green – Red (alternating)	Bad

Length Adjustment

Towel length can be adjusted by pressing button. Each time button is pressed the towel length that will be dispensed will change. Every time that the length is adjusted the LED light will flash indicating the length that has been selected.

Indicator	Length	LED color
Short (S)	8"	Green
Medium (M)	12"	Yellow
Long (L)	16"	Red

Delay

The delay (between dispensing) can be adjusted by pressing this button. Each time the button is pressed the delay will change. This change is accompanied by the LED light flashing a different colour indicating which delay has been selected. Note: Delay can be set in Sensor Mode. If this is done, after sensor has sensed set) before being able to sense again.

Indicator	Delay	LED color
Short (S)	0 second	Green
Medium (M)	1.5 second	Yellow
Long (L)	3 second	Red

Factory Default Settings

Pressing this button will change settings to the factory default settings. Pressing this button is indicated by a rapid red/green fluttering LED light.

Length	12"
Delay	0 second
Mode	Sensor

Sensor

The Smart System iQ can be set to one of two different operating modes. The default setting is the SENSOR MODE. Upon closing the cover after inserting batteries, one sheet of paper will automatically dispense. After that initial sheet is torn, the dispenser will be in sensor mode, waiting for a hand to be placed underneath before it dispenses paper. The alternative setting is the TOWEL OUT MODE. When in this mode, towel is always available. Once the exposed sheet of towel is torn off, the next sheet of towel automatically dispenses another length. Each time button is pushed the Mode will be changed and be accompanied by the LED light flashing a different color indicating which Mode has been selected.



Mode	LED color
Towel Out	Green
Sensor	Yellow

See Electronic Roll Towel Dispenser Loading Card for full loading instructions

For more information:

www.northwood.co.uk/raphael T: 01952 236 930